

[] | *heckert/en/fems/*

FEMS App Manual Charging and Discharging

Version:2026.7.1

Table of Contents

1. How to use the FEMS App Manual Charging and Discharging 2

2. Contact us 3

3. Directories 4

3.1. List of illustrations 4

1. How to use the FEMS App Manual Charging and Discharging

1. How to use the FEMS App Manual Charging and Discharging

Launch the Heckert Solar Online Monitoring.

In EMS, navigate to the *Storage System* chip in the side menu and click or tap on it. This will open a list of all chips available for your system:

 **Storage System**

 **Manual Charging**


 Info

^

^

Select the *Manual Charging* or *Manual Discharging* chip. This will take you to the main window of FEMS App Manual Charging and Discharging.

There are two user interfaces here:

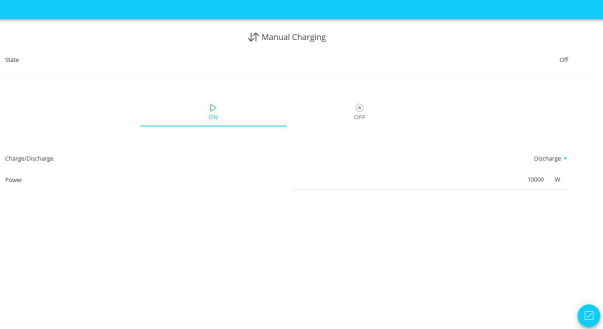

1. **ON**  enables manual charging or discharging.

Discharge ▲

Charge

Discharge

Discharge ▼

10000 W

Use the drop-down menu to select whether you want to charge or discharge the electrical energy storage system.

Enter the desired power in watts below. Depending on your view, the power may currently be displayed in kW.



The FEMS App Manual Charging and Discharging is currently being updated.

▶ ON

● OFF

2. **OFF**  turns off the controller.

3. If you have made any changes to the settings, you must confirm them using . Only then will the changes take effect.

2. Contact us

For support, please contact:

Symphon-E Service

Service phone: +49 (0) 371 45 85 68 - 100

E-mail service: symphon-e@heckert-solar.com

3. Directories

3.1. List of illustrations