


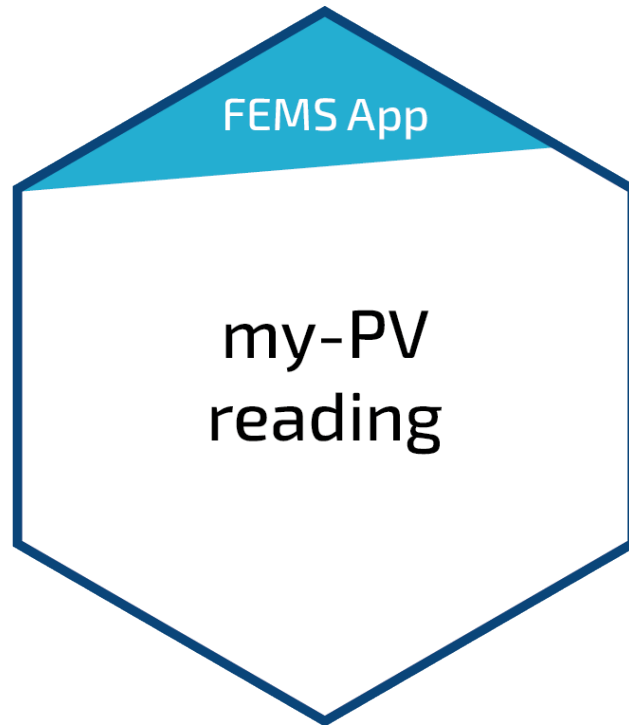

FEMS App my-PV Read Access

Version:2025.7.1

Table of Contents

1. Introduction	2
2. Installing the app	2
2.1. Enter the my-PV AC•Thor-9s-IP	2
2.1.1. IP from the my-PV settings	3
3. my-PV settings	4
4. Contact us	6

1. Introduction

1. Introduction

Dear customer,

Thank you for choosing the "FEMS App my-PV Read Access". You are welcome to send us your suggestions so that we can further improve the quality of our products.

2. Installing the app

- Use these instructions to integrate the my-PV products AC•Thor 9s or AC ELWA 2 into EMS.
- For general instructions on how to install a FEMS App, cf. [AppCenter documentation](#).
- Start in the EMS Online Monitoring.

Power-to-Heat my-PV AC•Thor 9s read only FEMS App my-PV reading	1. Select the FEMS App my-PV Read Access in the EMS App Center under the "Power-to-Heat" category.
FEMS App my-PV reading REGISTER LICENCE KEY MODIFY APP INSTALL APP	2. Click on Install app.

2.1. Enter the my-PV AC•Thor-9s-IP

The IP address of the my-PV AC•Thor 9s or AC ELWA 2 must be entered during installation.

MyPV AC-Thor 9s read only

Alias*

MyPV AC-Thor 9s read only

IP-Address*

192.168.178.152

INSTALL APP



The IP can be found in the my-PV-IP settings (see below) or the settings of your router.

2.1.1. IP from the my-PV settings

live.my-pv.com

Here you can try out the my-PV Cloud: Demo-Link

Login

Register

Forgot Password?

Login

USERNAME (E-MAIL) *

Email

PASSWORD

Password

Login

🏠

📈

ℹ️

❓

⚙️

Geräte Einstellungen

Anlagen / Geräte

Benachrichtigungsregeln

Mein Profil

Abmelden

↺

Advanced Settings

1. Log into the my-PV web interface with your access data.

2. Click on the cogwheel symbol in the top right-hand corner.

3. Click on Device settings.

4. Then click on Advanced settings.

5. Then open the IP settings menu:

3. my-PV settings

IP Settings

MAC address

Current IP address

192.168.178.152

Current subnet mask

255.255.255.0

Current gateway

192.168.178.1

Current DNS

192.168.178.1

DHCP-Mode

☒ DHCP

☐ Static IP

ⓘ Use static IP only if you are familiar with network administration.

Save

3. my-PV settings

live.my-pv.com

Here you can try out the my-PV Cloud: [Demo-Link](#)

Login

Register

Forgot Password?

Login

USERNAME (E-MAIL) *

Email

PASSWORD

Password

Login

Geräte Einstellungen

Anlagen / Geräte

Benachrichtigungsregeln

Mein Profil

Abmelden

1. Log into the [my-PV web interface](#) with your access data.

2. Click on the **cogwheel symbol** in the top right-hand corner.

3. Click on **Device settings** and then open the **Control settings** menu.

Control Settings

 **TIP**
For many control types there are separate instructions for the required settings.
More information can be found [here](#).

Control type

Fenecon FEMS Manual

① AC-THOR Number >1: only 'Slave' selectable.

Control source IP address

192

168

178

131

Device ID

1

Device port

502

Control state

Conn. to Adj./Modbus
P=-21018

Power timeout

10

s

Control target

-200

W

① Negative value means feed-in. Only change this value if you are familiar with the control strategy - read Help for more details.

Interval target value:

☒ Off
☐ On

① Interval target value: If active, a different target value of the control is used in the set time window.

Block start / stop hour

0

0

Save

4. Select **Fenecon EMS Manual** as *Control type*.

5. Enter the DHCP-assigned **IP address of the EMS** as the *IP address of the controller*.



The IP address of the EMS can be found in the network configuration in **Online Monitoring under Settings** or your router settings.



The IP address of the EMS should be set in the router to **Always assign the same IPv4 address to this network device**.

6. Set **1** for *Device ID* and **502** for *Device port*.

7. Click on **Save**.

The installation is now complete.

4. Contact us

4. Contact us

For support, please contact:

Symphon-E Service

Service phone: +49 (0) 371 45 85 68 - 100

E-mail service: symphon-e@heckert-solar.com