

Symphon·Ξ

Configuration Manual — Janitza

Version:2026.3.1

Table of Contents

1. Introduction	2
2. Product description	2
3. Integration via Modbus/TCP (Ethernet)	2
3.1. Configuration of the meter.....	2
3.2. Configuration of the app.....	2
4. Integration via Modbus/RTU (RS485)	3
4.1. Configuration of the meter.....	3
4.2. Configuration of the app.....	3

1. Introduction

1. Introduction

Dear customer,

The following configuration instructions describe the integration of Janitza meters into EMS. Please read these instructions carefully before starting the installation and configuration.

2. Product description

The following meters are compatible with EMS and can be integrated:

- UMG 96RM-E network analyzer
- UMG 604-PRO network analyzer
- UMG 96-PA-MID+ network analyzer
- UMG 511 power quality analyzer
- UMG 512-PRO power quality analyzer

3. Integration via Modbus/TCP (Ethernet)

Installation of the meter and configuration according to the manufacturer's instructions.

3.1. Configuration of the meter

For integration via Ethernet, the following parameters must be set in the meter itself:

- A **fixed IP address** must be assigned during the Ethernet configuration.



EMS and Janitza meters must be in the same network!

- Janitza also offers a BOOTP and DHCP mode. These are **incompatible** with EMS!

3.2. Configuration of the app


When you ordered the [FEMS App Production and Consumption Meter](#), you received a 16-digit license key. You can redeem the app independently in the EMS App Center using the license key. You can find instructions on how to do this at [here](#).

After entering the license key, the configuration interface appears.

[Konfigurationsoberfläche -- Einbindung über Modbus/TCP] | [/other/en/meters/janitza/janitza_config_1.jpg](/other/en/meters/janitza/janitza_config_1.jpg)

Image 1. Configuration interface — Integration via Modbus/TCP (Ethernet)

Select the device model (here: UMG 96RM-E network analyzer), the type of use (here: as a production meter) and the integration (Modbus/TCP (Ethernet)).

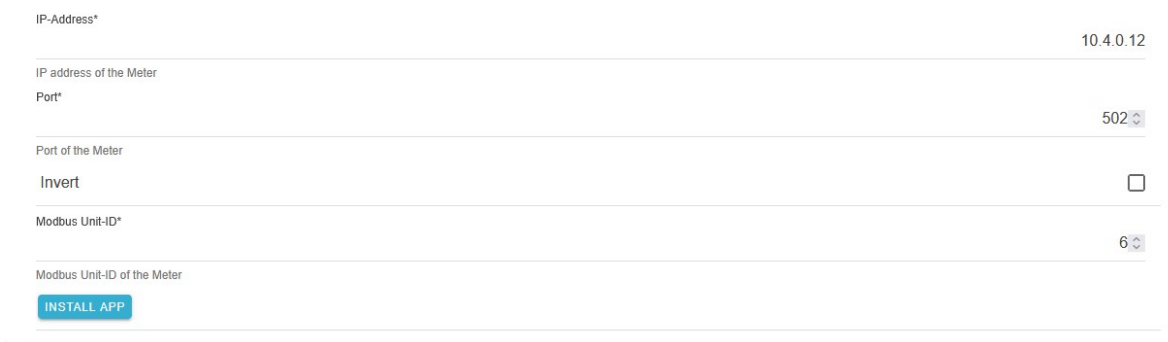

IP-Address* 10.4.0.12

IP address of the Meter

Port* 502

Port of the Meter

Invert ☐

Modbus Unit-ID* 6

Modbus Unit-ID of the Meter

INSTALL APP

Image 2. Configuration interface — Integration via Modbus/TCP (Ethernet) — Entering the IP

Then enter the IP address and port from the [configuration of the meter section](#), as well as whether you want to invert the meter values. The Modbus unit ID is only used internally and does not need to be adjusted.

Complete the setup by tapping/clicking on *INSTALL APP*.

4. Integration via Modbus/RTU (RS485)

Installation of the meter and configuration according to the manufacturer's instructions.

4.1. Configuration of the meter

For integration via RS485, the following parameters must be set in the meter:

- Baud rate: 9600
- Stop bit: 1
- Parity: None

The Modbus unit ID stored in the app must match the Modbus unit ID set on the Janitza meter on site.

4.2. Configuration of the app

When you ordered the [FEMS App Production and Consumption Meter](#), you received a 16-digit license key. You can use this license key to redeem the app independently in the EMS App Center. You can find instructions on how to do this at [here](#).

After entering the license key, the configuration interface appears.



The screenshot shows a configuration window titled "Janitza meter". It contains several input fields and dropdown menus for setting up a Modbus/RTU (RS485) integration. The fields are: "Alias*" (empty), "Device model*" (set to "Janitza Netzanalysator UMG 96RM-E"), "Mount Type*" (set to "Production-Meter"), "Integration*" (set to "Modbus/RTU (RS485)"), "Invert" (checkbox, unchecked), "Modbus-ID*" (set to "modbus2: modbus2"), and "Modbus Unit-ID*" (set to "6"). Below these fields is a label "Modbus Unit-ID of the Meter" and a blue button labeled "INSTALL APP".

Image 3. Configuration interface — Modbus/RTU (RS485) integration

Select the device model (here: UMG 96RM-E network analyzer), the type of use (here: as a production meter) and the integration (Modbus/RTU (RS485)).

Then enter the Modbus ID (this may be preselected) and the Modbus unit ID.

Complete the setup by clicking *INSTALL APP*.